


Montageanleitung : Schreibtisch JS..




Assembly instruction : desk J

JS19
JS16



JS12

JS08

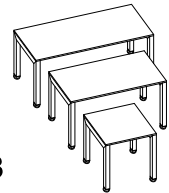


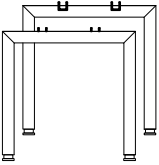2x (A)  100699 JFUS	2x (B)  67 / 107 / 147 / 167	8x (D)  8,4 x 1,2 500213	4x (F)  7 x 55 566811	
	1x (C)  80/120/160/ 180 x 80	8x (E)  M8 x 16 508800	6x (G)  5 x 55 500260	1x (J)  SW: 6 500282

1

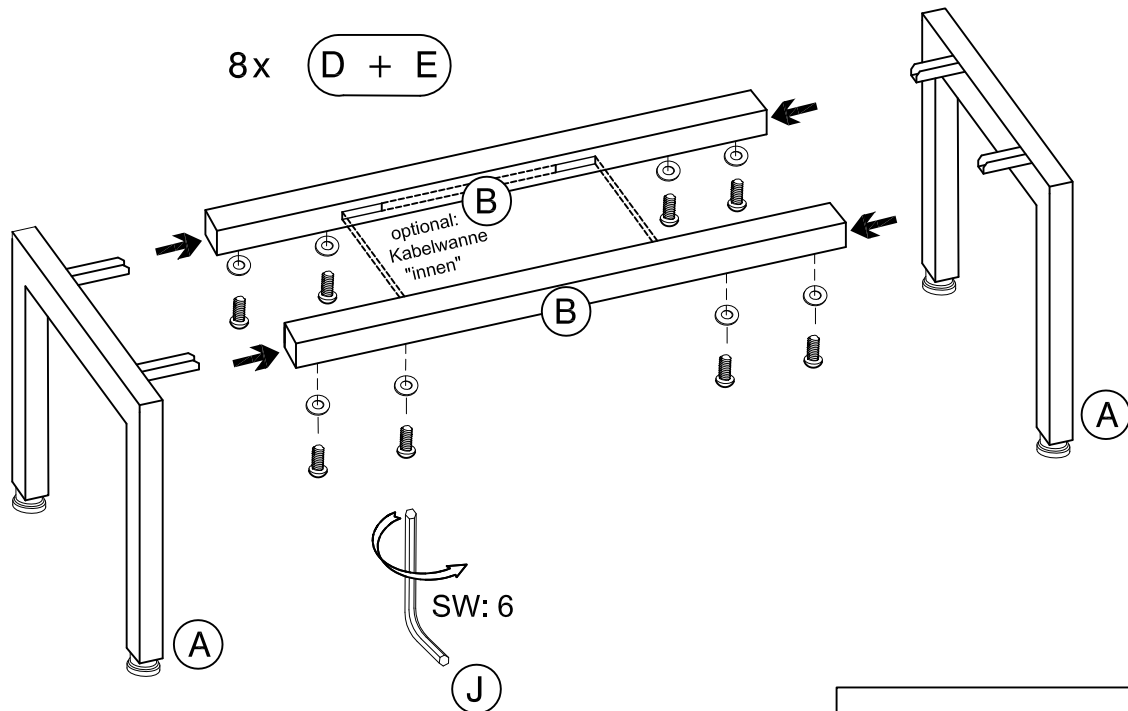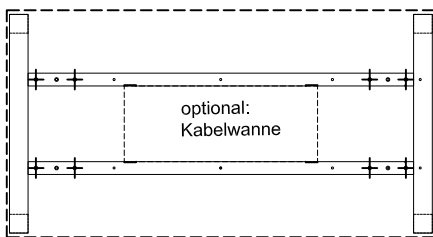

8x (D) 
8,4 x 1,2
8x (E) 
M8 x 16

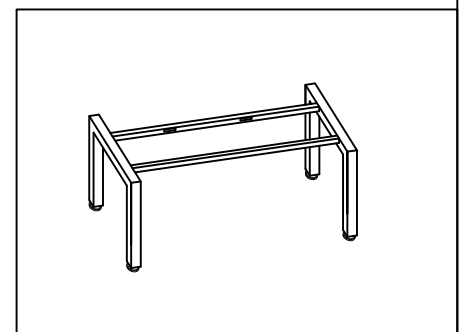

2




ohne Verkettungsplatte: weiter auf Seite 4

2*


mit Verkettungsplatte: weiter auf Seite 2

* Nur bei Schreibtisch Serie JS + Verkettungs-Anbauplatten LE* / JT* / JA* :


2*

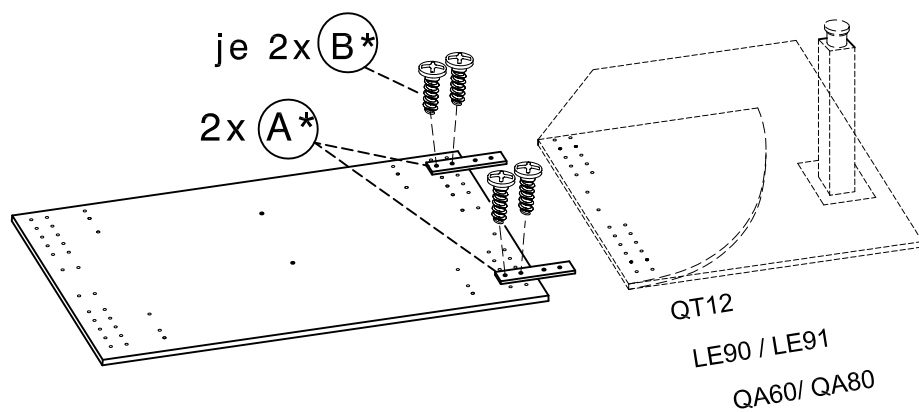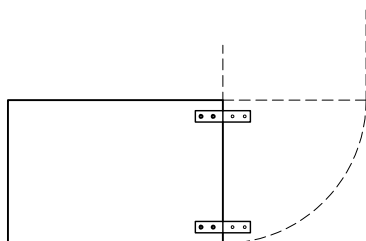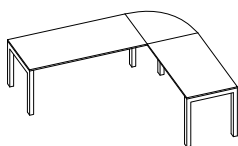


Eckwinkel LE90

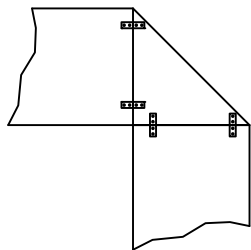


Eckwinkel LE91

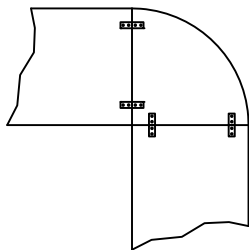


Trapezplatte JT 12

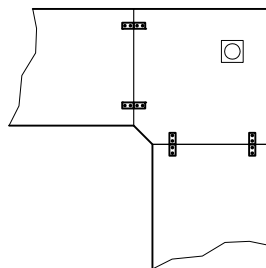

Ansatzstisch JA 60/80
(Deskend extension)

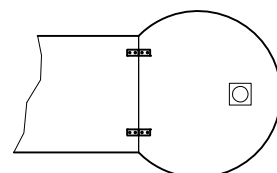


4 x (A*)



120x30x3mm

521144


4 x (A*)



120x30x3mm

521144


4 x (A*)



120x30x3mm

521144

2 x (A*)



120x30x3mm

521144

16 x (B*)



(6,3x16)

500250

16 x (B*)



(6,3x16)

500250

20 x (B*)



(6,3x16)

500250


12x (B*)




(6,3x16)

500250


1 x (C*)

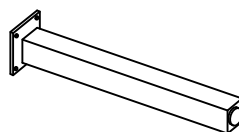

1 x (C*)

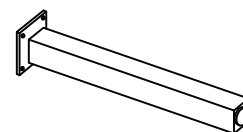


1x (E)




(4,5x35)

1x (F)




Kabelklemme

1x (E)




(4,5x35)

1x (F)




Kabelklemme

2x (E)



(4,5x35)


2x (F)




Kabelklemme

* Nur bei Schreibtisch Serie JS + Verkettungs-Anbauplatten LE* / JT* / JA* :

3*

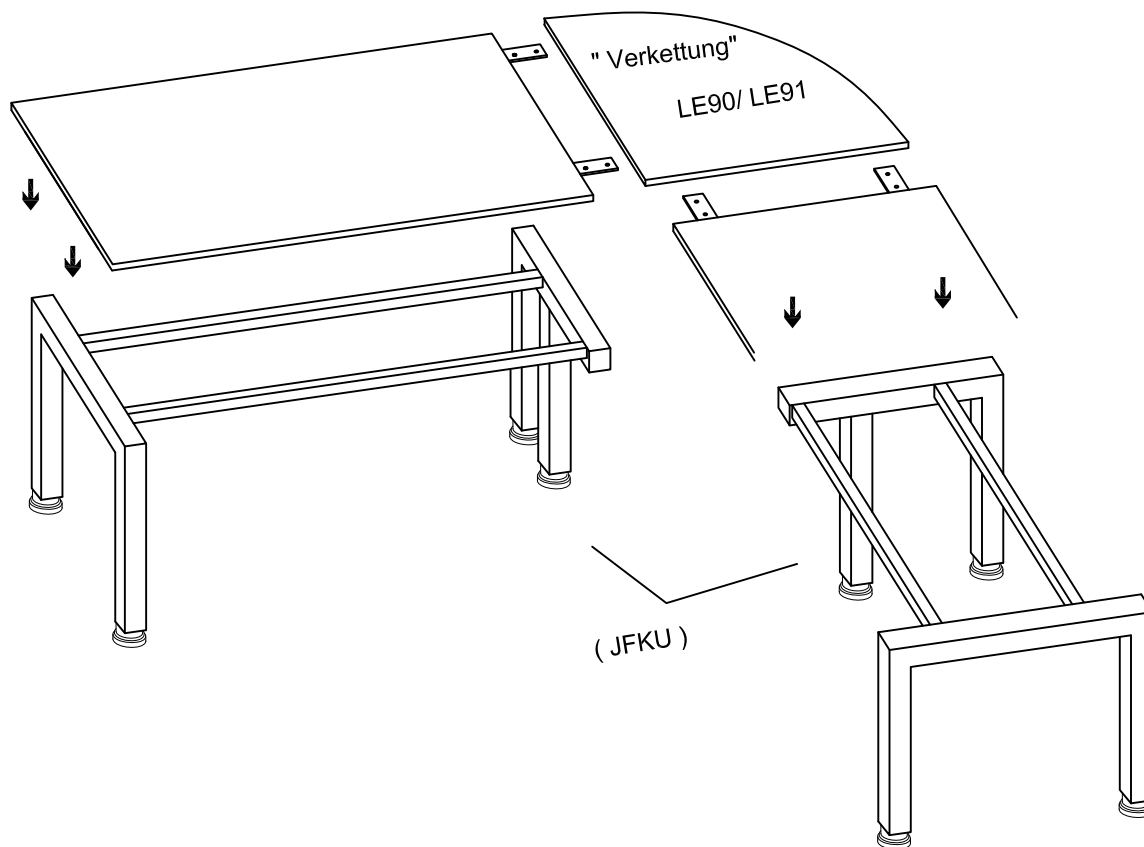

4*

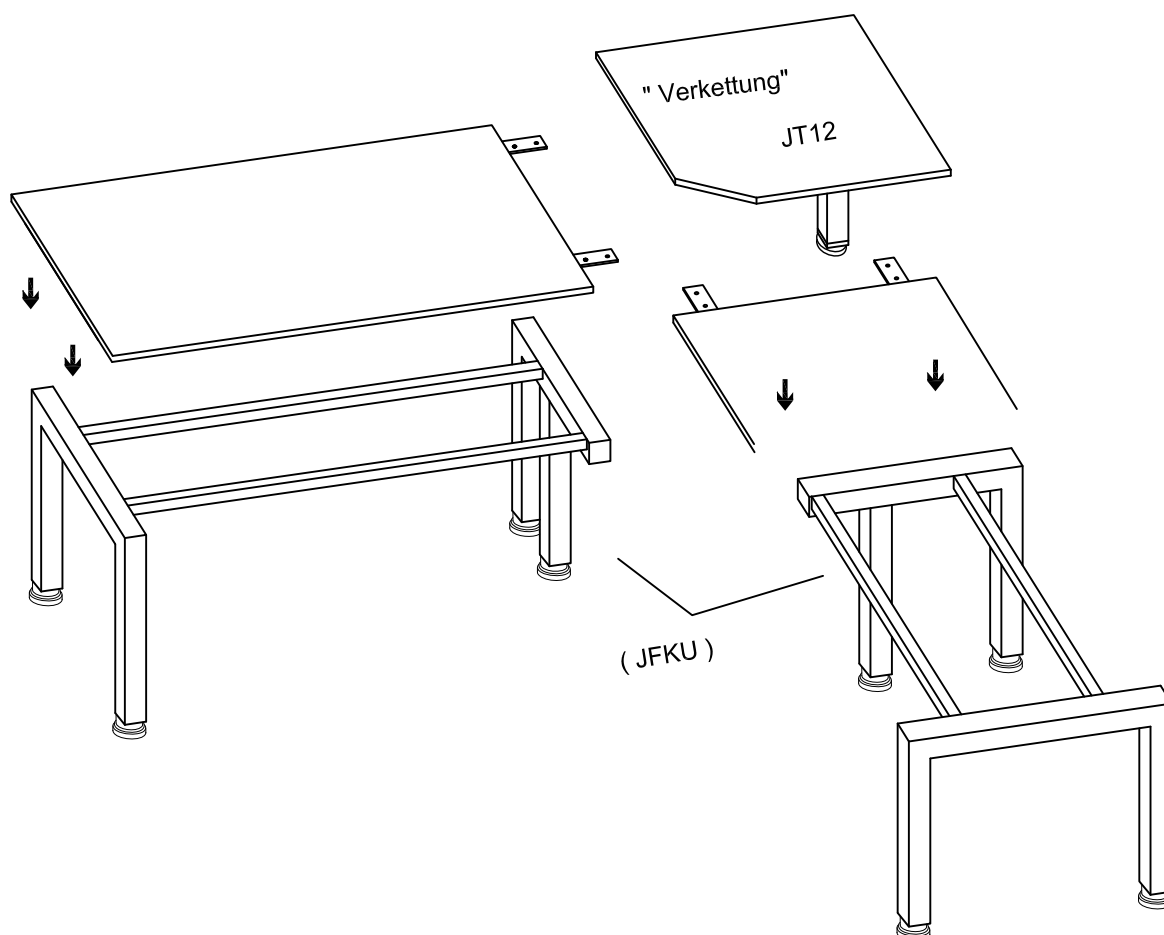

2




4x (F)



7x 55


4x
"vorgebohrt"

(F)

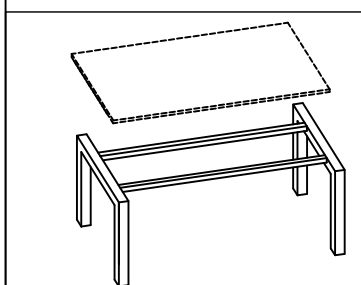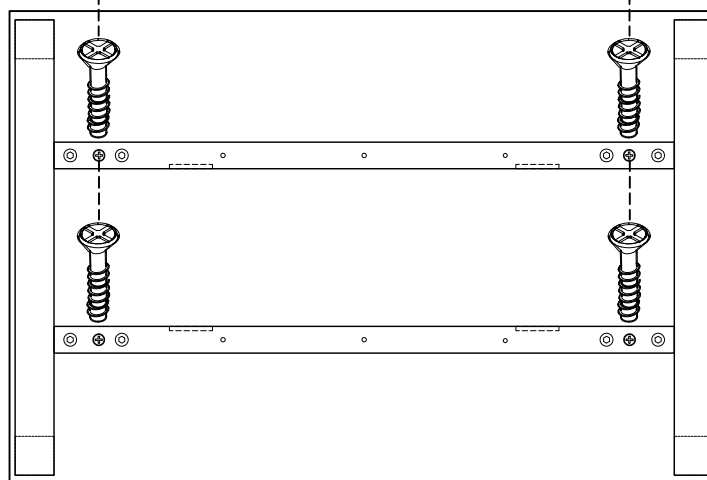


3

bis 1.20 m

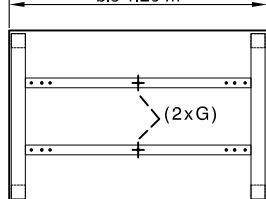

(2xG)


ab 1.60 m

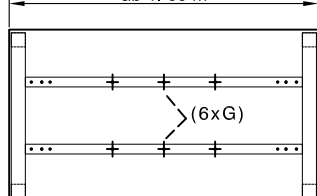

(6xG)

2 bis 6x
"selbstschneidend"

(G)

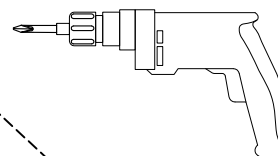

2-6x (G)



5 x 55

